



Your Sky Card will deactivate if it is out of its home Sky decoder for longer than a 3 week period. To keep the card active you will need to turn on the EMM's smartcard function within the decoder at the end of the 3 week period for one hour for the card to receive the necessary updates and stay activated.

To turn the update function follow the steps below.

Press the Menu Button

Scroll across to Tools and press OK

Scroll down to CA slot setting and press OK

Scroll down to EMM allow

Right arrow so it then says Enable

Press Exit to return to the previous screen.

While this setting is enabled it will get its updates and during the update process you will get an intermittent scrambled signal on the screen. After the one hour update period follow the steps below:

Press the Menu Button

Scroll across to Tools and press OK

Scroll down to CA slot setting and press OK

Scroll down to EMM allow

Right arrow so it then says Disable

Press Exit to return to the previous screen.

It is recommended that every 3 weeks you enable this setting and watch Sky for 1hour to keep your Sky card active. If your card has gone to sleep (deactivated) you can leave this function turned on until the card reactivates, this may take 3+ hours.