

How to Update W Series TV

1. Insert the USB stick into the USB port at the side of the TV
2. Supply power then turn the TV on and wait until you have an operating channel
3. Press MENU on the remote
4. Scroll down to Import Flash Clone and press OK. Press only ONCE and wait (approx. 5 seconds)



5. TV will turn off automatically and turn ON again
 6. Remove USB Stick
- Your Update channel files are now loaded.